




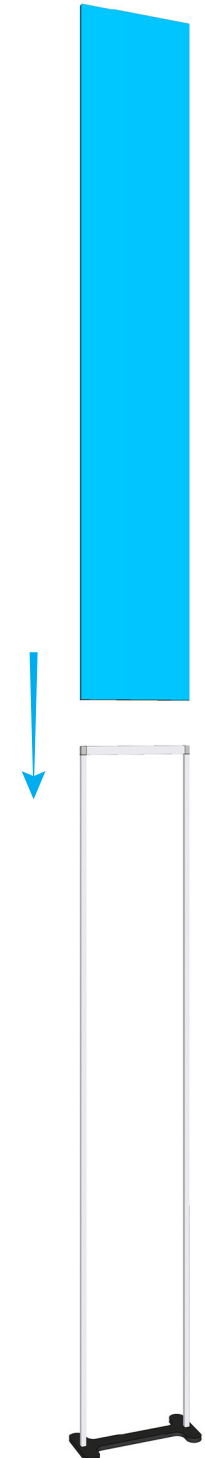


**FRAME PARTS LIST**


<p>① </p> <p><b>Allen Wrench</b> 1 pc</p>	<p>② </p> <p><b>Bolts</b> 2 pcs</p>	<p>③ </p> <p><b>"Bone" Base</b> 1 pc</p>
<p>④ </p> <p><b>Silver Bars (without connectors)</b> 2 pcs</p>		<p>⑤ </p> <p><b>Top Bar (with connectors)</b> 1 pc</p>

**GRAPHIC INSTALLATION**




**FRAME ASSEMBLY INSTRUCTIONS**

**STEP 1**

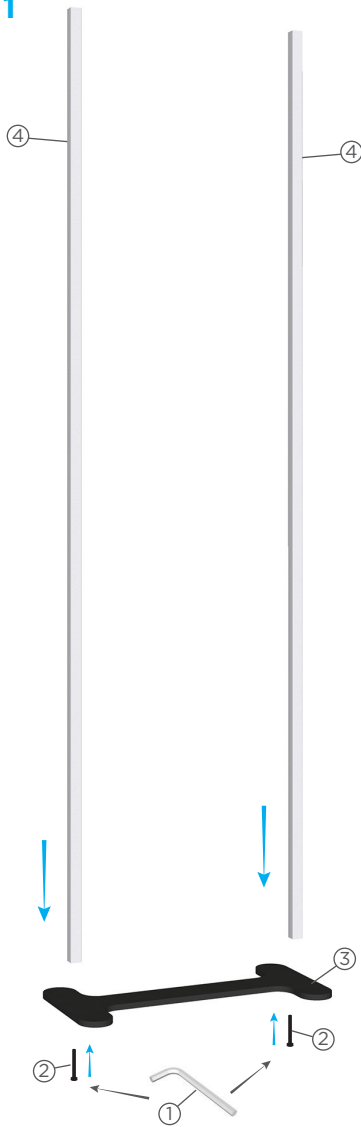

Insert the bolts through the bottom of the base and screw into the silver bars using the allen wrench. The silver bars will have a threaded insert on one end for the bolts.

**STEP 2**

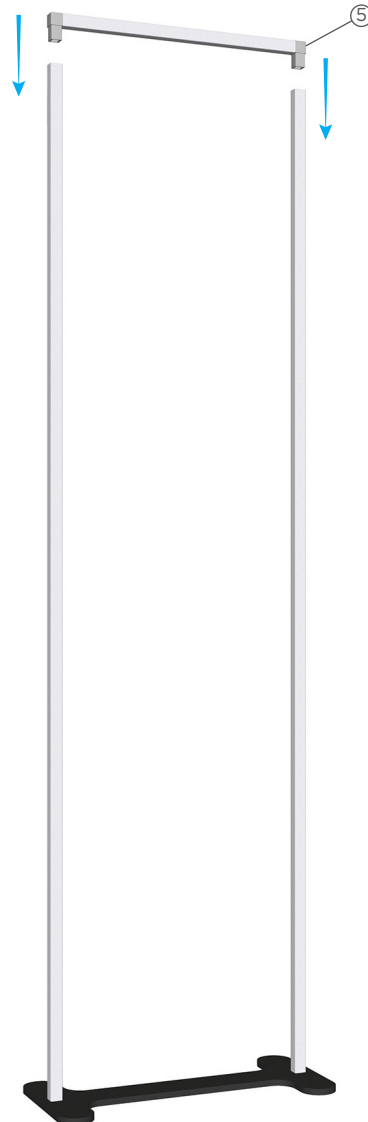

Insert the top bar with connectors to complete the frame.

Pull the graphic over the frame.