








FRAME PARTS LIST

①  Allen Wrench 1 pc	②  Bolts 4 pcs	③  Middle Bar (threaded) 1 pc	④  Base 2 pcs
⑤  Silver Bars (without connectors) 2 pcs	⑥  Top Bar (with connectors) 1 pc		


FRAME ASSEMBLY INSTRUCTIONS

STEP 1

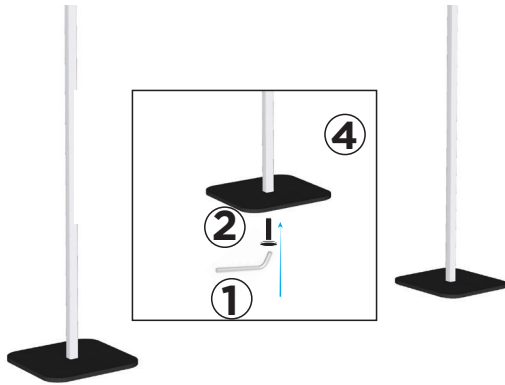


Thread bolts through the black bases into the bottom threads of the silver bars without connectors.

STEP 2

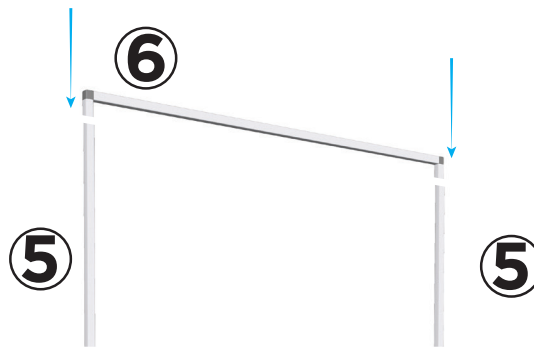


Insert the top bar with connectors into the top section of the upright bars.

STEP 3

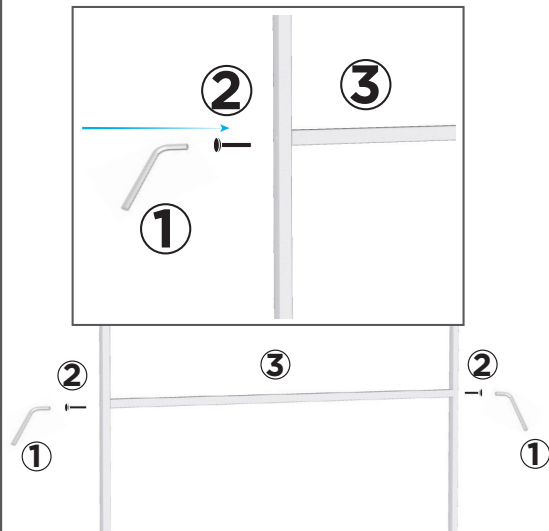

Insert bolts through upright bars into middle bar and tighten completely.


STEP 4

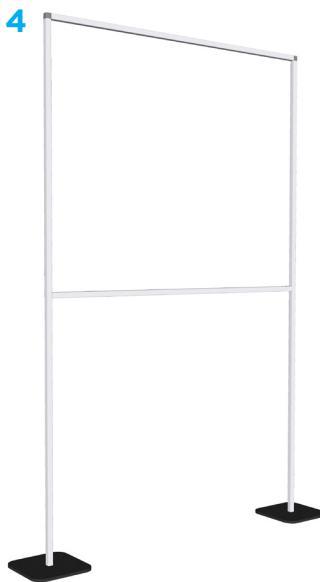

Hand-tighten the connector bolts completely using the allen wrench completing the frame.

GRAPHIC INSTALLATION

STEP 1

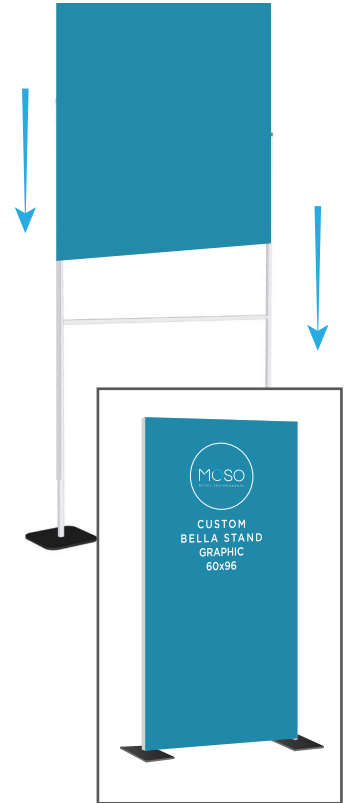

Take your fabric graphic and find the bottom opening. Stitched edge(s) will line up to the narrow edge of the frame.

Carefully pull the graphic over the entire structure like pulling on a sock or pillowcase. When the graphic is all the way on, smooth out wrinkles with your fingers and align seams to edges of the frame.

On tall frames, a helper to hold the fabric for you is **highly recommended**.

You may also need a step stool or step ladder to get the fabric started over the top of the frame.