





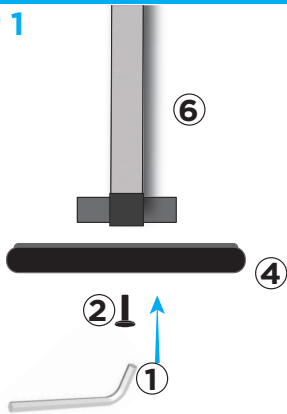


FRAME PARTS LIST

① 	② 	③ 	④ 
Allen Wrench 1 pc	Bolts 3 pcs	Side Bar (with connectors) 2 pcs	Base 3 pcs
⑤ 	⑥ 		
Silver Bars (without connectors) 4 pcs	Middle Bar (with connectors) 1 pc		


FRAME ASSEMBLY INSTRUCTIONS

STEP 1




Insert connector bolts through base from bottom, and connect to threaded bottom bar corners using the supplied allen wrench. Repeat this step with the outside bases.

STEP 2

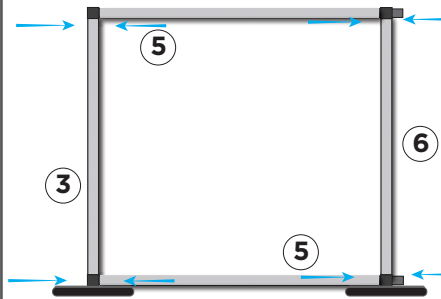

Insert the silver bars into the side bar connectors. Then connect the silver bars to the middle bar with connectors.

STEP 3

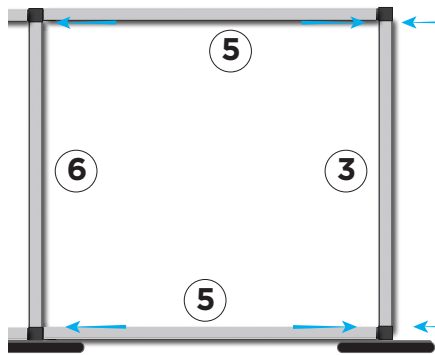

Repeat Step 2 for the second sidebar with connectors and silver bars. A rubber mallet or hammer and wood block may be needed to tap the tube completely onto the connector.

STEP 4



This is how your finished frame will look once the top and bottom bars are connected.

GRAPHIC INSTALLATION

STEP 1



Take your fabric graphic and find the bottom opening. Stitched edge(s) will line up to the narrow edge of the frame.

Carefully pull the graphic over the entire structure like pulling on a sock or pillowcase. When the graphic is all the way on, smooth out wrinkles with your fingers and align seams to edges of the frame.

On tall frames, a helper to hold the fabric for you is highly recommended.

You may also need a step stool or step ladder to get the fabric started over the top of the frame.

