








FRAME PARTS LIST


①  Allen Wrench	②  Short Bolts	③  Long Bolts	④  Black Bars w/ Threaded Inserts	⑤  Feet
⑥  Bottom Bar w/ Threaded Inserts			⑦  Top Bar w/Connectors	

FRAME ASSEMBLY INSTRUCTIONS

READ THE ENTIRE INSTRUCTIONS BEFORE ASSEMBLING THE FRAME


STEP 1

Insert the **Top Bar w/Connectors**⁷ into the top of the **Black Bars w/Threaded Inserts**⁴. Make certain the threaded inserts are on the opposite end of the **Black Bars**⁴.

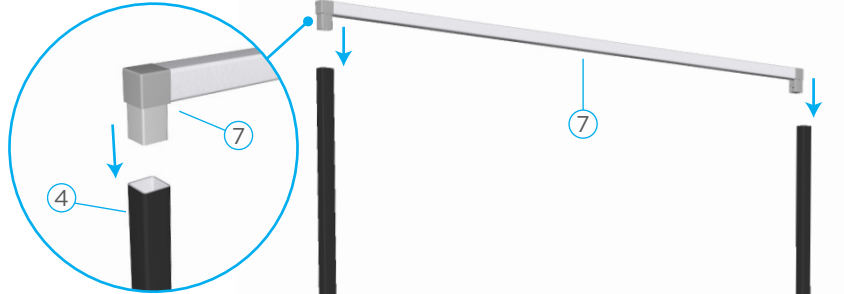


STEP 2

Connect the **Bottom Bar w/Threaded Inserts**⁶ by passing a **Long Bolt**³ through the **Black Bars**⁴ into the threaded insert of the **Bottom Bar**⁶. Adjust any bars if necessary. Tighten the **Long Bolt**³ until both ends are tight and symmetrical.

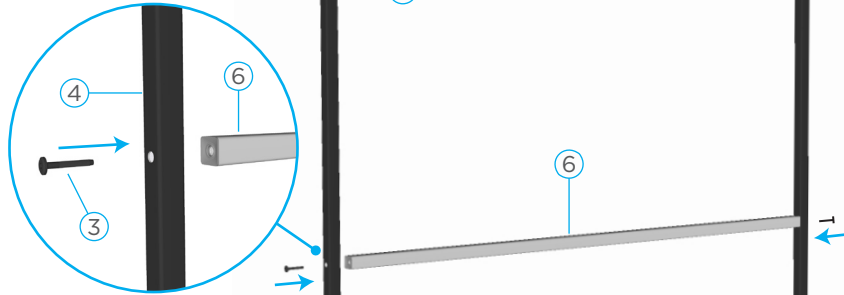


STEP 3

Attach the **Feet**⁵ to the Bottom of the **Black Bars**⁴ by passing a **Short Bolt**² through the **Feet** and into the threaded inserts of the **Black Bars**⁴. Align and tighten the **Feet**⁵ until they are secure. (see the box DID YOU KNOW?)

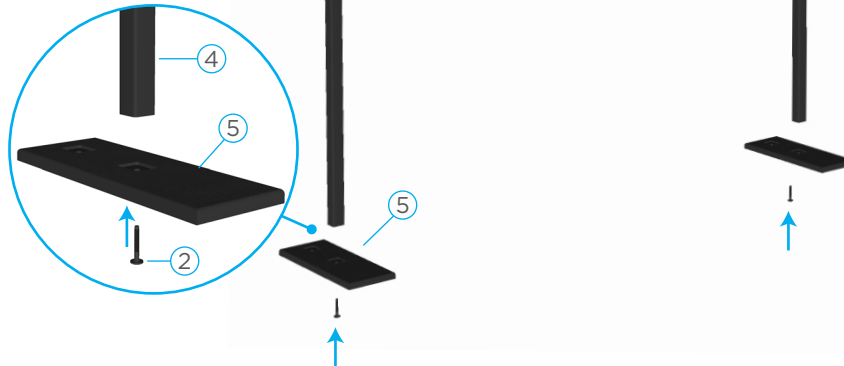

DID YOU KNOW?

The Feet feature two placement options for you to choose from:

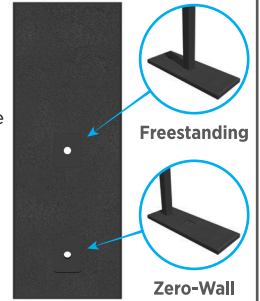

Freestanding
Use the center hole for between mattresses

Zero-Wall
Use the outer hole for displaying the Mattress Headboard against a wall

GRAPHIC INSTALLATION

STEP 1



Pull the graphic over the frame.

STEP 2



Zip up the bottom of graphic.