






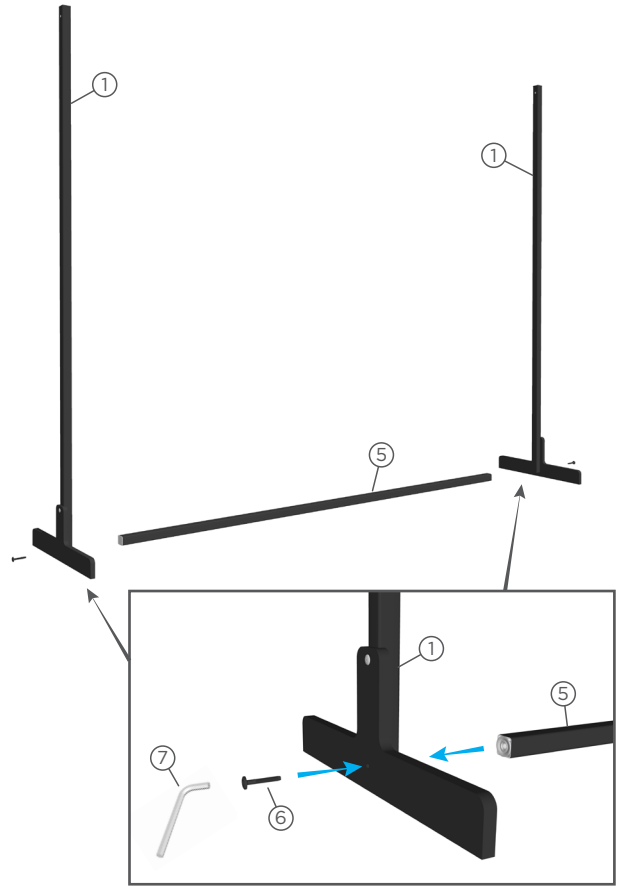


PARTS LIST


 <p>Legs 2 pc</p>	 <p>Dowel with Threaded Endcap* 1 pc</p>	
 <p>Graphic* 1 pc</p>	 <p>Black-Capped Dowel* 1 pc</p>	
	 <p>Black Bar with Threaded Ends 1 pc</p>	
	 <p>Bolts 4 pc</p>  <p>Allen Wrench 1 pc</p>	<p>*The graphic² may arrive with both dowels already inserted in the pole pockets: The threaded endcap dowel³ in the top pocket and the black-capped dowel⁴ in the bottom pocket. If the dowels are not already inserted into the graphic, do this before proceeding to step 1.</p>

ASSEMBLY INSTRUCTIONS

STEP 1



STEP 2

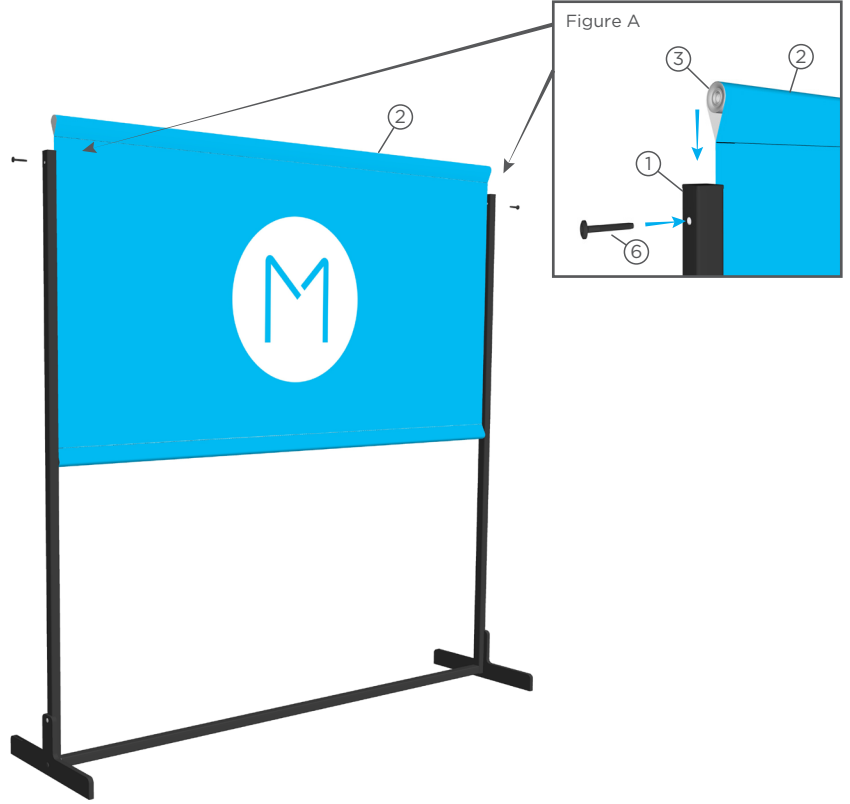

Using the allen wrench⁷ and two of the bolts⁶, attach the black bar⁵ to the base of legs¹.

Install the graphic² by first attaching the threaded dowel³ in the graphic's top pole pocket to each leg¹ using the two remaining bolts⁶ and the allen wrench⁷. Your EZ Headboard is now fully assembled.