


GALLERY PRISM HANGER ASSEMBLY INSTRUCTIONS pg 1

STEP 1

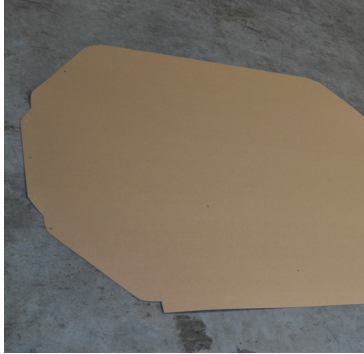


Step 1 Place 1 of the cardboard sections face-down on a clean section of the floor.

Step 2 Bend the inside flaps toward the center at the pre-creased joints.

STEP 2




STEP 5

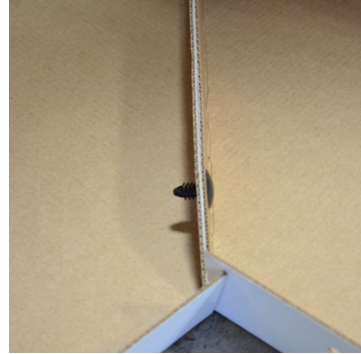


Step 5 With a helper, slide corners together and place a black fastener through each of the 2 holes in the lower connection flaps.

Step 6 Bring the 2 sections together, being mindful to keep the upper and lower sections on the same end.

STEP 6

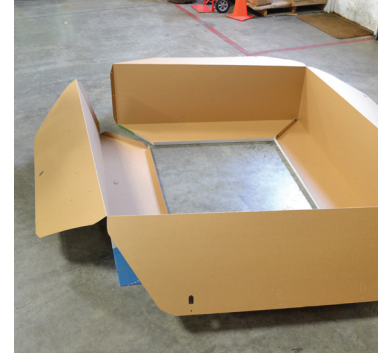

STEP 3

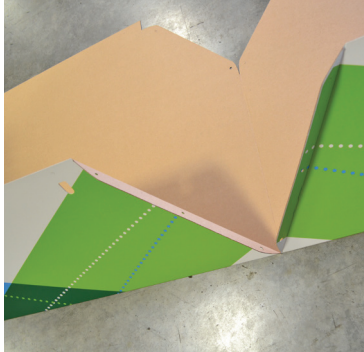

Step 3 Fold connection flaps inward at the pre-creased joints. If it's helpful, first bend the flap up (toward the face) and then back down to enhance the crease. The short connection flaps have 2 small holes and 1 larger hole that will be used for hanging.

Step 4 Repeat folding process on the other cardboard piece.

STEP 4



STEP 7



Step 7 Continue to put fasteners into the lower section connections until you have brought the 4 sections into a square.

STEP 8



Step 8 Close the center connection flaps securely by placing a black fastener through each of the 3 holes in the flaps. Be sure the upper corner connecting flaps remain on the outside of the structure for hanging.

GALLERY PRISM HANGER ASSEMBLY INSTRUCTIONS pg 2

STEP 9



Step 9 Lower one of the top flaps down until it rests on the connecting flap from the lower section.

STEP 10



Step 10 Push one of the black fasteners through the face and into the holes of the connecting flaps. Use the finger holes to hold the flaps together.



FOR A VIDEO TUTORIAL ON ASSEMBLING THE PRISM, VISIT NICE.MOSO.DESIGN

IF YOU NEED FURTHER ASSISTANCE, CALL MOSO AT 503-719-6867

STEP 11



Step 11 Push onconnectors through the smaller holes in the upper corner connecting flaps, leaving the top hole empty for now.

STEP 12



Step 12 Place an "S" hook in the upper hole for hanging.