

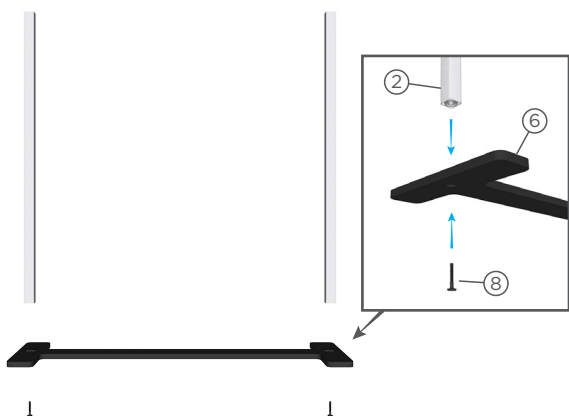


### PARTS LIST

<p>①</p>  <p><b>Graphic</b> 2 pc</p>	<p>②</p>  <p><b>Threaded Side Bars</b> 2 pc</p> <p>③</p>  <p><b>Side Bars</b> 2 pc</p> <p>④</p>  <p><b>Top Connector Bar</b> 1 pc</p> <p>⑤</p>  <p><b>Mid-Connector Bar</b> 1 pc</p>	<p>⑥</p>  <p><b>Base</b> 1 pc</p> <p>⑦</p>  <p><b>Allen Wrench</b> 1 pc</p> <p>⑧</p>  <p><b>Bolts</b> 2 pc</p> <p>⑨</p>  <p><b>Tape Strips</b> 24 pc</p>
--	--	--


### ASSEMBLY INSTRUCTIONS

#### STEP 1

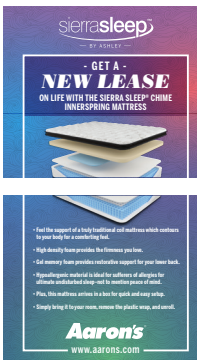


Using the Allen Wrench<sup>7</sup> and the two Bolts<sup>8</sup>, attach the threaded ends of the Threaded Side Bars<sup>2</sup> to the Base.<sup>6</sup>

#### STEP 2

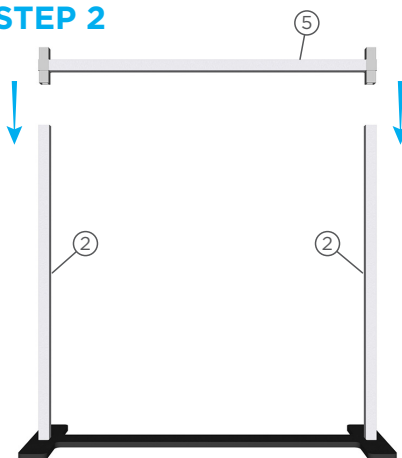


Insert Mid-Connector Bar<sup>5</sup> into the open ends of the Threaded Side Bars.<sup>2</sup>

#### STEP 3

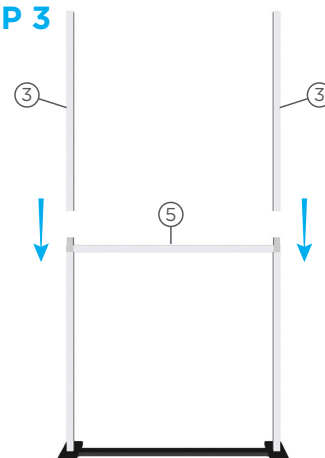


Insert the Side Bars<sup>3</sup> into the remaining connectors of the Mid-Connector Bar.<sup>5</sup>

#### STEP 4

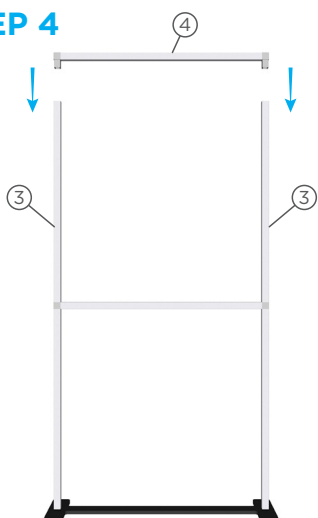

To complete the frame, insert the Top Connector Bar<sup>4</sup> into the ends of the Side Bars.<sup>3</sup>

#### STEP 5

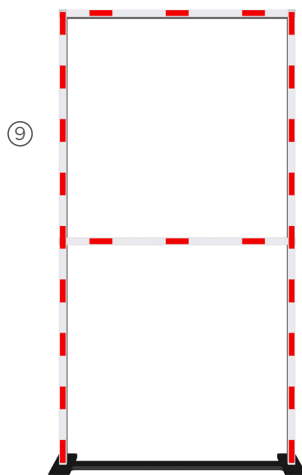

Attach the Tape Strips<sup>9</sup> to the frame. The suggested placement/spacing is shown.

#### STEP 6



Attach the Graphic<sup>1</sup> to tape/frame; bottom half first, then the top half of the graphic. The Post Stand is now fully assembled.