

POST STAND PARTS LIST

① Long bars with velcro (x2)



② Short bar with threaded inserts



③ Base



④ Bolts (x4)




⑤ Hex Key




ASSEMBLY INSTRUCTIONS

STEP 1

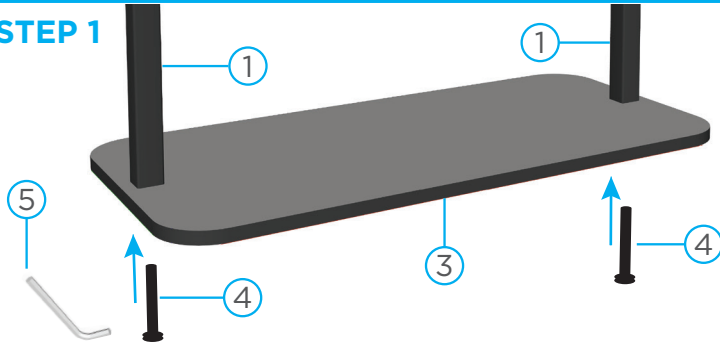


Insert **Bolts**^④ through the **Base**^③ from the bottom, and screw the **Bolts**^④ into the threaded insets of each **Long Bar**^①. Do not fully tighten the **Bolts**^④ yet.

STEP 2

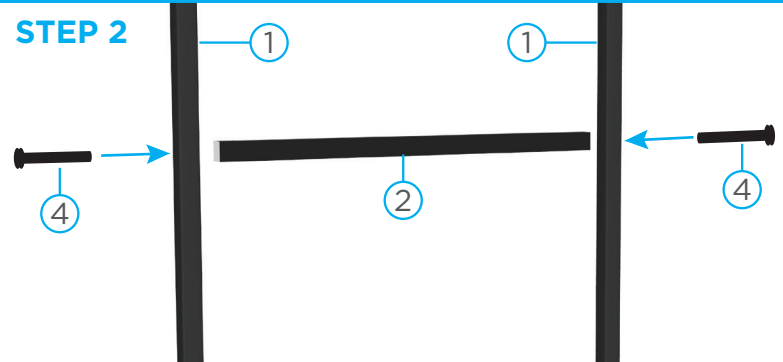



Connect the **Short Bar**^② to the two **Long Bars**^① by passing a **Bolt**^④ through the drill holes of the **Long Bars**^①, then screw the **Bolts**^④ into the **Short Bar's**^② threaded inserts. Tighten the **Bolts**^④ until secure, then tighten the **Bolts**^④ from **Step 1**.

STEP 3

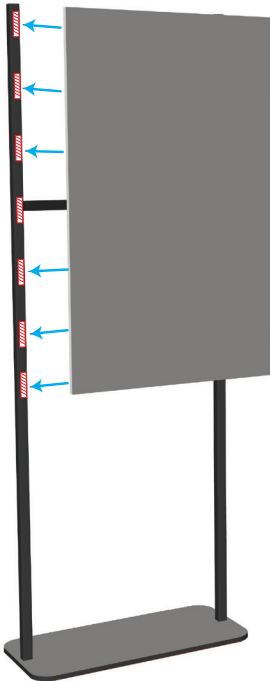

Once all of the bolts are tightened and secured, align and attach the velcro on the post stand and graphic(s).

STEP 4 (optional Brochure holder)

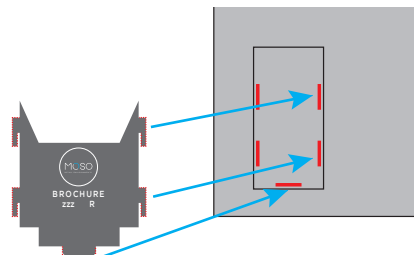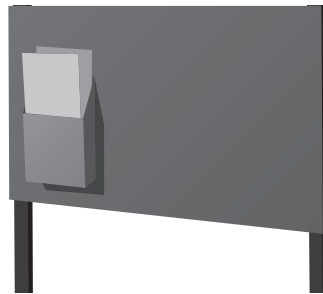

Insert the side tabs of the brochure holder into the vertical slits in the graphic, then push the bottom tab in the horizontal slit.

Complete

