


### STAND OFF INSTALLATION TOOLS

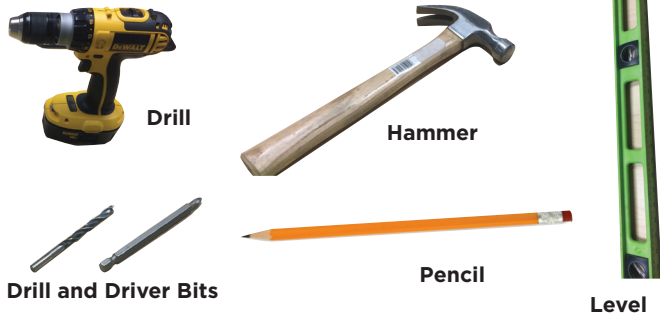

### STAND OFF INSTALLATION PARTS



### STAND OFF INSTALLATION INSTRUCTIONS

#### STEP 1



**Step 1** Align your graphic where you want it to be placed on your wall. Use a level to assure correct orientation.

#### STEP 2



**Step 2** Using a pencil, Make a mark in the center of each hole. Make certain that your marks all align when you are finished.

#### STEP 3



**Step 3** Using a drill with an appropriately sized bit for your drywall anchor, drill a hole in the center of each of your marks.

#### STEP 4



**Step 4** Insert your drywall anchors into each hole you have drilled. You may need to tap them in with a hammer.

#### STEP 6



**Step 6** Align the holes of your graphic with the opening of the stand off bases. Insert the stand off cap and screw it into place for each stand off. Your sign is now complete.

#### STEP 5



**Step 5** Using the provided screw, affix your stand off base into your drywall anchor until it is tight and flush with the wall.

