


PARTS INCLUDED



① **Cardboard Graphics** 2 pc



② **Wood Frame** 1 pc

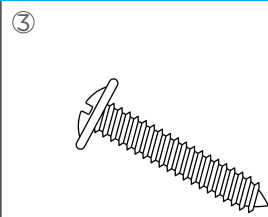

③ **Screws** 10 pc

TOOLS NEEDED



Drill or Screwdriver



Packaging Tape


ASSEMBLY INSTRUCTIONS

STEP 1




Lay the cardboard graphic face down on a clean surface.

STEP 2

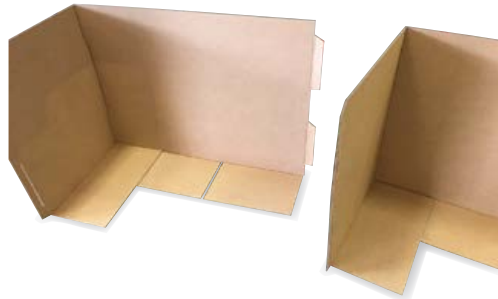

Fold the flaps and tabs along the creases, first forward (graphic to graphic) then backward (cardboard to cardboard).

STEP 3

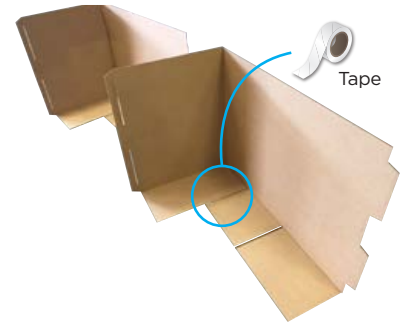

Stand 1 cardboard piece up, and fold the short end of the box 90° such that the bottom flaps overlap as shown, then tape the overlapping flaps with packing tape. Repeat this step with the other cardboard piece.

STEP 4



Insert the tabs from 1 piece through the slots in the other piece, as shown. Repeat this step with the other cardboard piece.

STEP 5



Use packing tape to secure all tabs and overlapping flaps.

STEP 6



Lay the cardboard box on its side. Set the wooden frame into the top of the box.

STEP 7



Using a drill or screwdriver, fasten the cardboard to the frame at the 4 corners, at the braces, and in the center of each short end of the box. Do not overtighten.