

FRAME ASSEMBLY INSTRUCTIONS

STEP 1

Lay one of the side panels face down on a hard surface and push the 16" long bars onto each of the corner connectors.

Pay special attention to the bar placement - bottom bars have a small screw hole, top bars have a large drill hole.

The top corner connectors have a spring button connection to hold the top bar in place.



STEP 2



Line up the bars to the corner connectors of the second side panel and begin to push down.

STEP 3




When connector is halfway down, slide the front and back sign faces into the side channels. Finish pushing the connectors home.

STEP 4 ↑↑↑↑

Four screws are provided. With the cart on its side, put the screws into the pre-drilled holes in the bottom bars to secure them to the corner connectors.

STEP 5



Screw the caster wheels into each corner of the cart.

STEP 6



Turn the cart upright onto its wheels and place the swatch hanger bars across the top.



About your Cart

Your swatch cart comes flat-packed and will require some light assembly. All that is required is a phillips screwdriver. A non-marking mallet is helpful for sticky connections.

FRAME PARTS LIST

① Side Panels



2 pcs.

② Front/Back Panels



2 pcs.

③ Bottom Bar

attach with screw



2 pcs.

④ Top Bar

attach with spring button



2 pcs.

⑤ Casters




4 pcs.

⑥ Screws



4 pcs.

⑦ Swatch hanger Bar

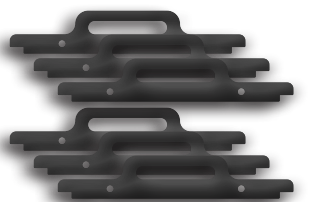

6 pcs.