

1


PREPARE YOUR WALL



- Proper preparation of your wall is critical, and you will probably want to have a helper.
- Repair any visible defects, smooth out bumps, and patch holes to ensure your wall is smooth and flat.
- If possible, remove all picture hooks, light fixtures, and switch plates.
- Wipe off any dirt, hair, dust or residue from old wallpaper with a dry cloth or a duster. Do NOT use water!
- A perfectly clean wall will help the adhesive backing to keep its stickiness if repositioning is required.

2


GETTING THE GRAPHICS READY

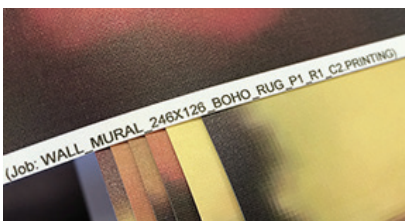

- Arrange the panels left to right, referencing the number sequence found either on the bottom of each panel or on the back. "Filename_Size_P1_R1_C1" is the first panel on the left. Followed by P1_R1_C2, P1_R1_C3 and so on.
- Unroll all panels and lay them flat on the floor, the printed side facing the ceiling.
- You may notice creases and/or bubbles as you unroll the panels. Do not worry, this is normal. The creases will disappear once the mural is flattened on the wall.

3


PEEL THE BACKING

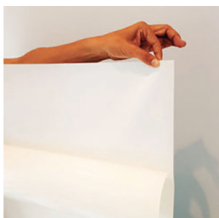

- Peel off the liner a few inches **ONLY** across the top of the first panel.
- Do NOT peel off the entire liner all at once.

4


ATTACH LEADING EDGE

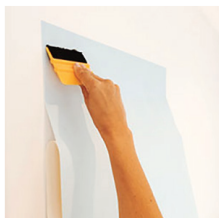

- Remember that the success of the installation will depend on properly placing the first panel.
- Stick the top left corner of the panel to the top left corner of your wall. This is the easiest place to start.
- Using a smoothing tool or squeegee, smooth the top of the panel onto the wall. Do NOT use pressure to avoid any scratches.

5

APPLY THE GRAPHIC

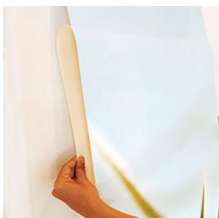

- Peel off the rest of the panel by gradually and evenly pulling down the liner, a few inches at a time.
- We recommend having another person hold the bottom of the panel as you work your way down.
- Once the first panel is applied, and if necessary, remove any bubbles by gently pushing them outward with the squeegee.

6


LINE UP THE PANELS



- Align the second panel with the first by matching the pattern of the mural so that the image looks continuous. The panels will overlap by up to 1 inch.
- Follow STEPS 4 and 5 above to apply the panel.
- Repeat the same process to apply all additional panels.

7

TRIM OVERAGE

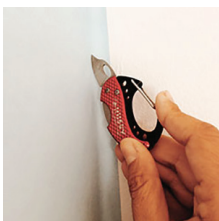

- Once all panels have been applied, **SLOWLY** trim all the overage with a utility knife with a sharp blade (ie: Xacto knife). Follow the edges of your wall or ceiling to do so. You can also use a ruler to cut through a straight line.
- If needed, repeat this process to cut around outlets, fuse boxes, windows, doors, etc., and to remove labels on the bottom (if applicable).