

WINDOW CLEANING & APPLICATION TOOLS

Mild Soap and Water / Lint-free paper towels or clean, residue-free cloths / Plastic Squeegee or credit card wrapped with soft cloth  
Tape Measure/ Isopropyl Alcohol (85%) - optional / Straight Edge - optional


PREPARATION

Clean the glass thoroughly with just warm water and mild soap or dish detergent. DO NOT use Windex or ammonia-based glass cleaners, as ammonia breaks down the adhesive on the graphic. To be sure the glass is clean do a follow-up cleaning with isopropyl alcohol (70%).

Use a tape measure and masking tape to mark the location for your graphic. For example, you can put a level line of tape at the top edge of where you would like the graphic to go. Then mark the tape with the center point. Put a bit of tape at the center point of the graphic, and then line up the marks when applying.


INSTALLATION INSTRUCTIONS

STEP 1

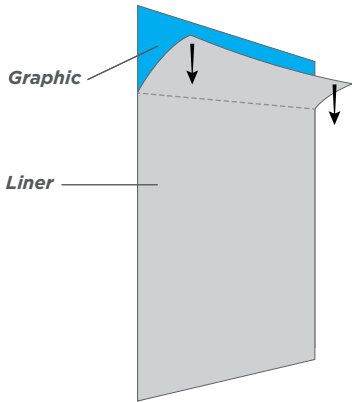


Peel and fold back the top edge of the liner about 2 to 4 inches, depending on the size of the graphic, to expose the adhesive on the back. Press along the folded edge of the liner to form a crease.

STEP 2

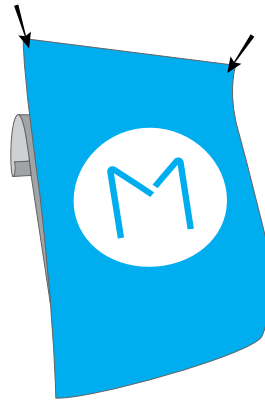

Carefully position the film so that it is properly aligned on all sides, then press the upper corners in place using light pressure.

STEP 3

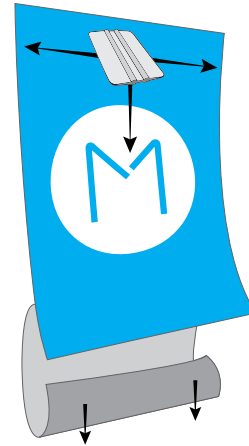


**MosoDot Tip:**  
You can start with just the heel of your hand, and then squeegee once all the paper is removed.

Make sure that the top edge is a straight, level line, neither dipping down or raised in the center. Using your hand or a soft plastic squeegee, lightly press the film in place along the top edge of the film. Working from the top of the graphic to the bottom, continue by peeling away more of the liner and applying light pressure to the film to attach it to the glass. Continue in this manner until the liner is completely removed and the window graphic is in place.


**IMPORTANT:** If the film is laminated it is especially important that you use careful, overlapping squeegee strokes that push the air out and away from the area that has already been adhered.

STEP 4

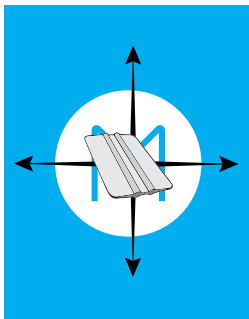

Squeegee the film with moderate pressure from the center and work outward in all directions. If you start seeing any large bubble or wrinkles, peel up from the bottom until the tension is gone and then work back down from top to bottom.

STEP 5

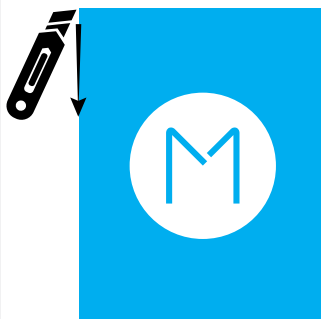

Finally, using a razor knife, trim away any excess film around the edges, being careful not to cut so deeply that you scratch the glass or damage any rubber window seals.

NOTES:

- Do not stretch the film as you attach it to the glass surface, and do not squeegee it down firmly until the window graphic is positioned correctly.
- If, after initial tacking, you find that the graphic is misaligned, carefully lift the film off the window and re-position it. If wrinkles form, gently lift the film up and remove the wrinkles as you reapply the film, before squeegeeing it.
- For larger graphics, it may be easier to first attach a piece of masking tape to the top of the graphic before removing the liner to create a hinge. Once you're sure the graphic is positioned correctly, flip the graphic up, peel down the top portion of the liner, and begin tacking the graphic in place as described above.
- In the case of window posters that must be seamed together, install the two pieces so that the edges of the film butt against each other. Do not overlap seams or edges.